




RUN-CHICKEN

INSTALLATION

1/4


video at  www.run-chicken.com/video

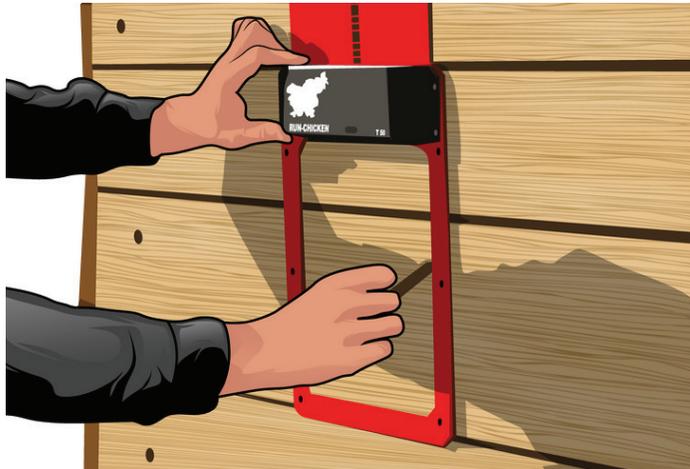


1 Mark the location of the opening.



2 Drill in the marked corners.

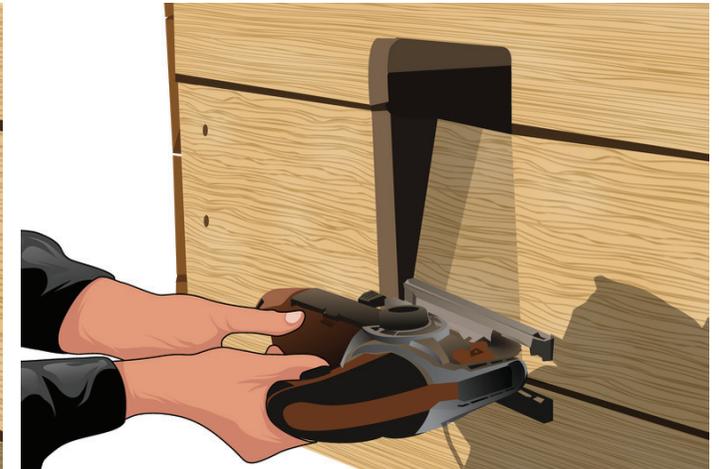


3 Saw off the opening by connecting the holes.

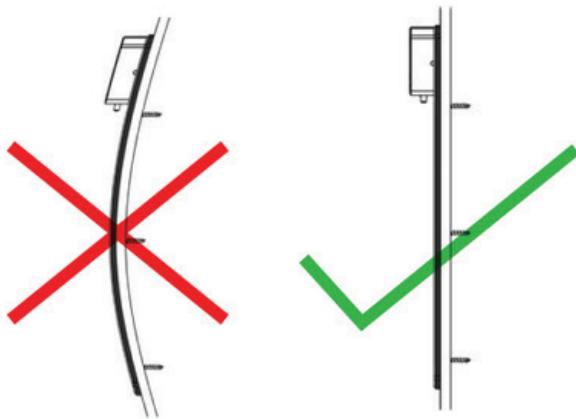

4 **!CAUTION!**
Do Not Bend The Door!




5 **!SCREW GENTLY!**
Do not over tighten the screws, or you will crush the rail, and the door will not move!

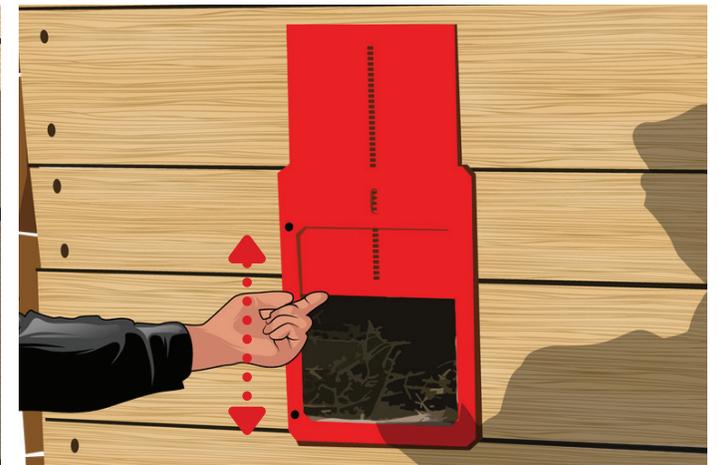

6 **!TEST THE DOOR!**
Can the door move up and down?
This test can greatly extend the lifetime of the battery.




7 **!MANDATORY PROCEDURE!** Unscrew the 4 screws on the black drive unit.

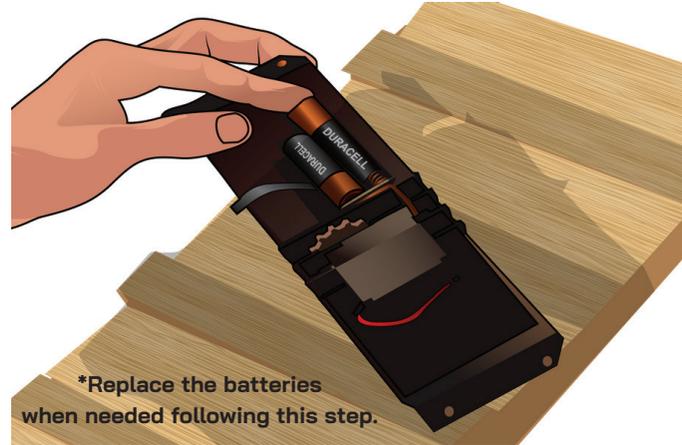

*Replace the batteries when needed following this step.

8 Remove the drive unit and check/place batteries inside.

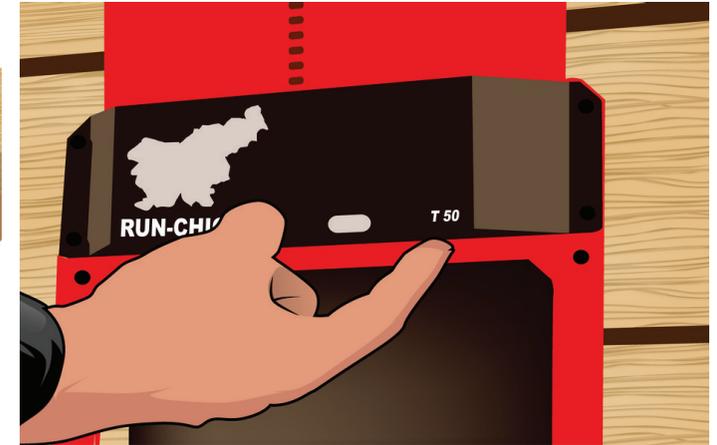

9 Press the button to see if the device is up and running.



10 **!WARNINGS!**

GAIN EASY ACCESS TO YOUR WARRANTY AT WWW.RUN-CHICKEN.COM.

AFTER REGISTRATION, YOU WILL GET A CONFIRMATION EMAIL THAT THE WARRANTY IS APPLIED.

**REGISTRATION CODE:
!MOD50V21-1**


11 WARRANTY & PRODUCT REGISTRATION



12 **INSTALLATION FINISHED**
Plug and play - no need for any additional step. The door will open up in daylight and close at night.

INDICATOR LIGHT - MEANINGS 3/4

video at  www.run-chicken.com/video

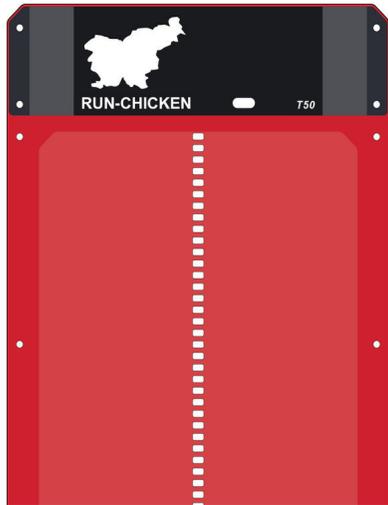

BATTERY LIFETIME:

Type of battery: 2x AA / Recommended brands Duracell or Panasonic. If you use high-quality batteries, they should **last you a whole year**, even in cold climates up to -15° F to 140° F (-25 °C to 60 °C).



REDLIGHT- BLINKING means that the battery is empty or almost empty. In this case, you need to replace the battery approx— 20 days before fully empty batteries.

COMPLETELY EMPTY BATTERIES?

When the **battery is COMPLETELY empty**, the door will not open on sunrise and will **stay closed to secure your chicken coop**.




BLUE LIGHT- BLINKING means that the door is in the "soon up or down mode" and does not use a lot of battery life. The BLUE light starts to blink when the unit's sensor recognizes the change of day to night and vice versa, which means that the door will soon open or close. The sensor excludes all artificial light sources, for example, sensor light, street lights or flashlights.

THE BUTTON - FUNCTIONS

When you push the **BUTTON**, the door goes **UP**, and the indicator light shines **GREEN**. When you push the test button again, the door **STOPS**, then you push again, and the door goes **DOWN**, and the indicator light shines **RED**.

The **BLUE** light starts to blink when the unit's sensor recognizes the change of day to night and vice versa, which means that the door will soon open or close.

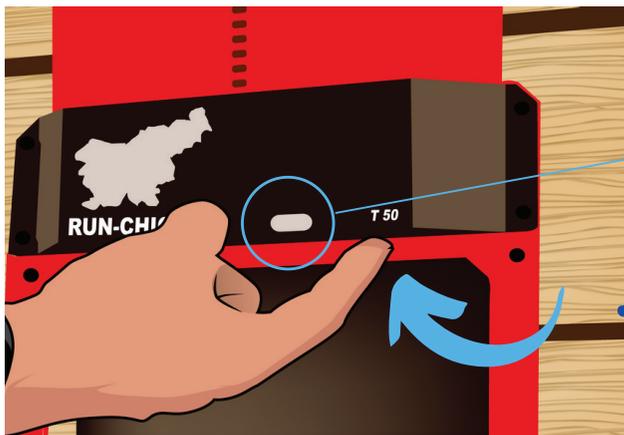

The **BLUE** light starts to blink when the unit's sensor recognizes the change of day to night and vice versa, which means that the door will soon open or close.

THE BUTTON - USER INTERFACE 4/4

video at



www.run-chicken.com/video

HOW TO SET THE DOOR TO OPEN AT A CERTAIN OPENING TIME?


You can manually set the door to **OPEN** at a specific time with the **BUTTON**. Please hold the button for FEW seconds until the indicator light is **GREEN**. When the indicator light shines green, you must release the button and then press it again to confirm it; the door automatically reads the TIME of the day and sets the door to the hour that you are in.

***For example:** when you look at your clock when you are pushing the button and the time reads 8 AM, you can press the **BUTTON** for FEW seconds, release it when the indicator light is **GREEN**, and press again to confirm it. That will set the **OPENING** time. The door will then open the next day at 8 AM and all the mornings after that.*

DO YOU WANT THE DOOR TO CLOSE LATER THAN AT NIGHTFALL?

You can manually set the door to **CLOSE** later than **NIGHTFALL** with the **BUTTON**. Please hold the button for FEW MORE seconds or until the indicator light is **RED**. When the indicator light shines red, you must release the button and then press it again to confirm it; the door automatically reads the **nightfall** and sets the door to close later than nightfall.

***For specific cases:** when you are in a dark environment that the door closes sooner than actual nightfall, that you have mounted your doors indoors, or if you have a specific breed of chickens that require to be outside longer.*

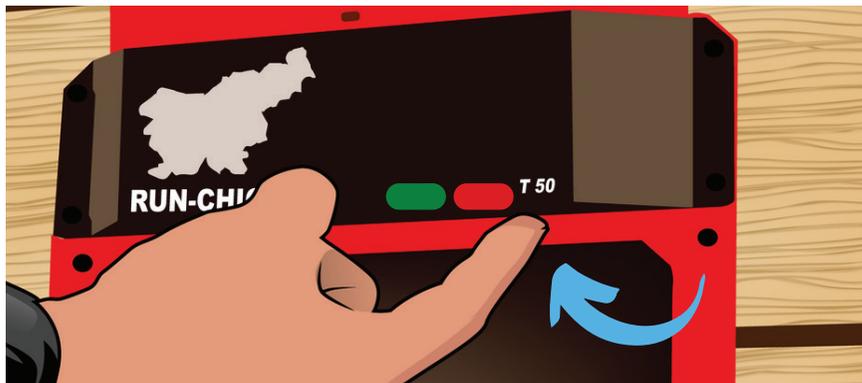

FACTORY RESET

When you remove batteries for more than 20 seconds, the unit will go to default factory mode. The same happens when the batteries are changed or when you hold the test button for 15 to 20 seconds; you reset the door to a **DEFAULT MODE**, so all your previous settings are reset by this mode. The door in this mode works according to daylight and nightfall that the light sensor senses.

DEFAULT FACTORY MODE The door always works on default factory mode if they are not configured differently by the user with the use of the button.

Every time that you press the test button, the door goes to TEST MODE for 20 min. This makes them more reactive to light, and they will go up and down if Light/Dark occurs. It also reverses the door's action - if they are opening, they will start to close and vice versa. If the button is pressed while the door is moving, it will stop.

After 20 min of non-pressing, the test button the door will go back in **SAFE MODE**. The door operating in default safe mode will open when the light is shining for more than 20 min and will close if it will be dark for more than 20 min. **Factory default mode works fantastically for all users.**



The sensor excludes all artificial light sources, for example, sensor light, street lights or flashlights. The **BLUE** light blinking is also an indicator of that.

RUN-CHICKEN



Hey, I' am Jure! Come and join us on our journey. Let's be the ones who listen to nature, ourself and the universe.

I'll never stop and give up! My team and I will explore and **RUN** to strive out for more each day. Learn with us and learn to give back, and we promise we will do the same.

Jure Markic



RUN-TIGER Business Director



RUN-CHICKEN Brand Owner

A handwritten signature in black ink, appearing to read 'Jure Markic'.

TECH SPEC & DOCUMENTATION & SAFETY

Parts Included with your Chicken Coop Door Model T50:

- 6pcs wood screw for installation
- 2pcs AA alkaline batteries
- Installation manual

Tools Required for Installation:

- Pencil (that writes on all surfaces)
- Power Drill or Screw Gun
- Jigsaw, keyhole hand saw
- Leveller

Recommended Safety Items:

- Safety Goggles
- Protective Gloves

Battery Lifetime: type of battery: AA / Recommended brands Duracell or Panasonic. If you use high-quality batteries, they should last you a whole year, even in a cold climate, in all weather conditions.

Usable environmental conditions: -15° F to 140° F (-25 °C to 60 °C)

Programmable Electronic: For advanced users and situations that call for precise timing, the user of RUN-CHICKEN doors can also program them by using the button located below the drive unit.

Main material: Aluminium

Waterproof: IP67 (Ingress Protection Grade)

Product packaging size: 16" x 12" x 1.6" (400 mm x 290 mm x 40 mm)

Item Weight: 2 LB (0.907 kg)

Warranty & Support: Warranty is gained online via registering at www.run-chicken.com, and support is given 24/7 via info@run-chicken.com

APPROVED FOR NON-COMMERCIAL AND OUTDOOR USE ONLY.
PLEASE READ AND SAVE ENTIRE INSTRUCTIONS BEFORE PROCEEDING.
INSTALLATION MUST COMPLY WITH ALL LOCAL CODES.

IMPORTANT: Save these Instructions for further reference.

INSTALLER: Please leave these Instructions with this unit for the owner.

OWNER: Please retain these instructions for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Read All Instructions Before Using the Appliance.

!WARNING! TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

A. Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.

B. Before servicing or cleaning the unit, switch off the appliance.

C. When cutting or drilling into the wall, do not damage electrical wiring and other hidden utilities.

!WARNING! CAUTION FOR INTENDED USE ONLY. FOR NON-COMMERCIAL AND OUTDOOR USE ONLY.

CAUTION, to reduce the risk of injury, be sure to turn off the device when installing.

!WARNING! Install this chicken coop door in accordance with all requirements specified.

!WARNING! To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Chicken Coop Door With Any External Device Non-Approved By The Manufacturer.

OPERATION

Always leave the chicken coop door to default settings if you do not wish to have a specific timer or do not have the knowledge to do so.

The manufacturer declines all responsibility in the event of failure to observe the instructions given here for installation, maintenance, and suitable use of the product. The manufacturer further declines all responsibility for injury due to negligence, and the warranty of the unit automatically expires due to improper maintenance.

This unit is manufactured for outdoor and under natural light use only. Do not use this unit indoors without natural light. **Thank you** for the purchase of this "easy to assemble" Chicken Coop Door. This manual is designed to help simplify the assembly process with step-by-step instructions and drawings. Please read through the entire manual before starting or watch the video on our website!

NOTE:

You have purchased a product that consists of multiple pieces. With your purchase, you assume full responsibility to provide the necessary manpower and/or equipment to assemble the unit. You also agree that any damage that happens to the equipment, product, or individuals during the entire installation process is your responsibility, and neither the seller nor the manufacturer will be held liable for any such damage.

Disposing of packaging separately according to type sort of each material

Devices may not be discarded with household waste!

Every consumer is legally obligated to discard an old and worn device separately from household waste, e.g., at your municipality/part of the city. This way, worn devices will be disposed of professionally, and negative effects on the environment prevented.

Batteries and accumulator batteries may not be discarded with household waste!

As a consumer, you are obligated by law to turn in all batteries and accumulator batteries, whether or not they contain dangerous chemicals, at a collection point in your municipality/part of a city or a store, to be removed in an environmentally friendly way.

Company info:

RUN-TIGER LLC
Vilharjeva cesta 38,
SI-1000 Ljubljana
Slovenia



DISPOSING OF DEVICE & LEGAL

User Manual

THANK YOU... for purchasing our passion!

With your help, we can make new products with the same kind of QUALITY and ENERGY.

Leave YOUR feedback if you support US.



info@run-chicken.com