


**RUN-CHICKEN**


# INSTALLATION

1/3


video at  [www.run-chicken.com](http://www.run-chicken.com)

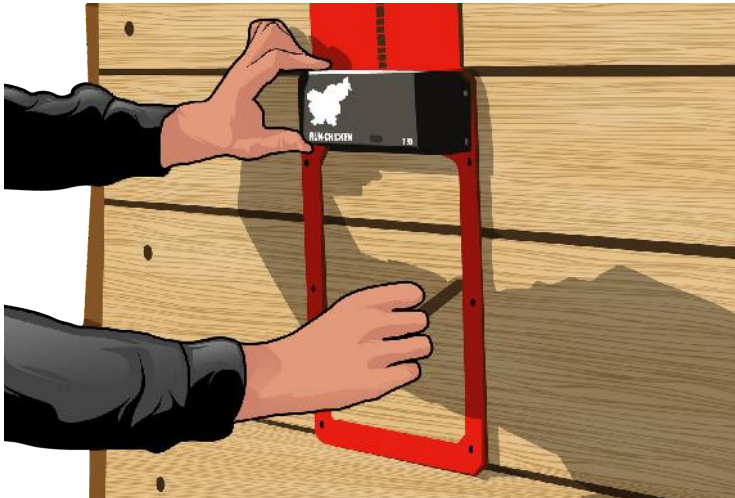


**1** Mark the location of the opening.

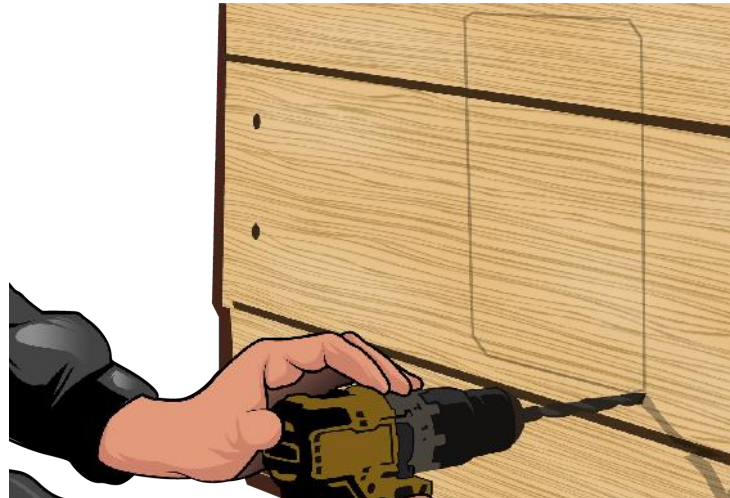


**2** Drill in the marked corners.

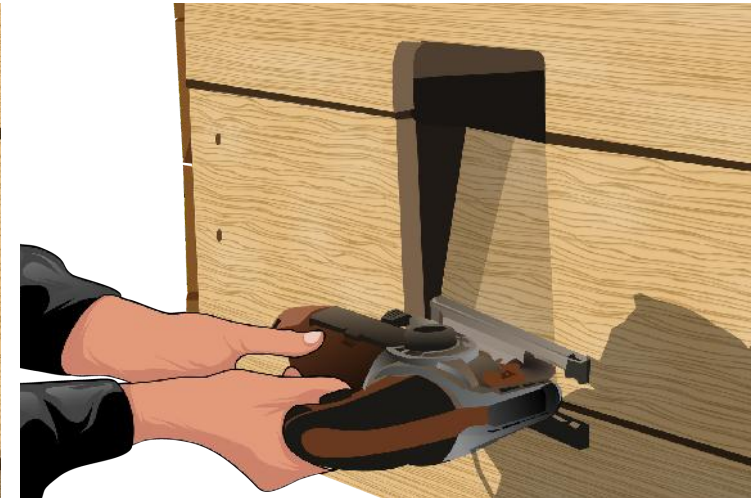


**3** Saw off the opening by connecting the holes.

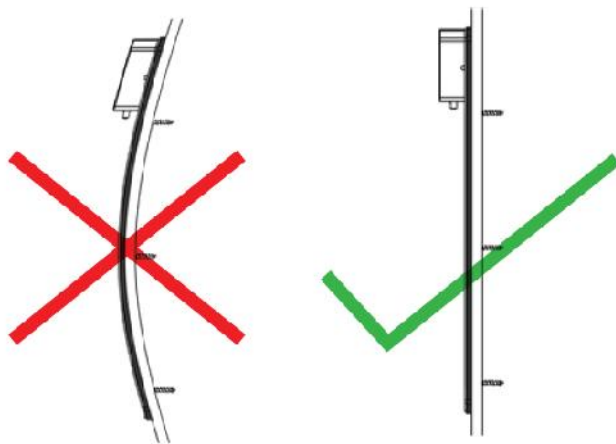

**4** **!CAUTION!**  
Do Not Bend The Door!

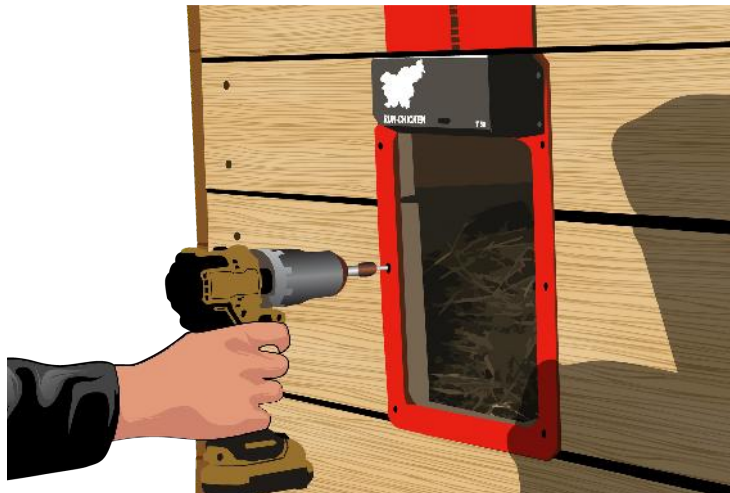

**5** **!SCREW GENTLY!**  
Do not over tighten, the screws or you will crush the rail and the door will not move!

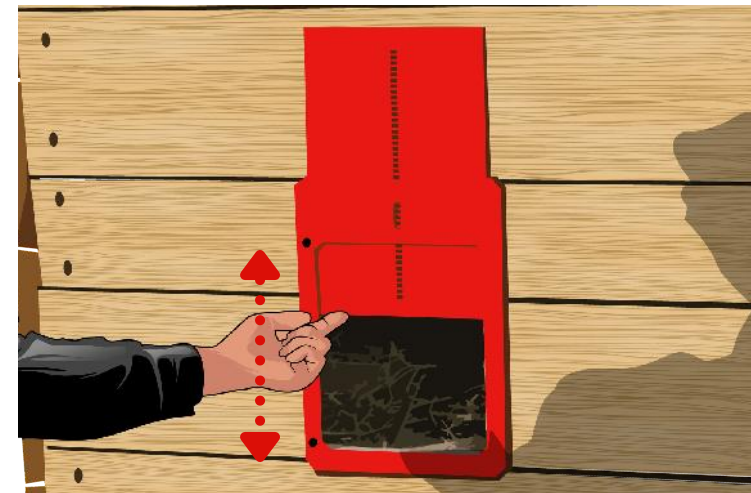

**6** **!TEST THE DOOR!**  
Can the door move up and down?  
This test can greatly extend the lifetime of the battery.

# INSTALLATION

2/3

video at




[www.run-chicken.com](http://www.run-chicken.com)



**7** **MANDATORY PROCEDURE!** Unscrew the 4 screws on the black drive unit.



**8** Remove the drive unit and check/place batteries inside.

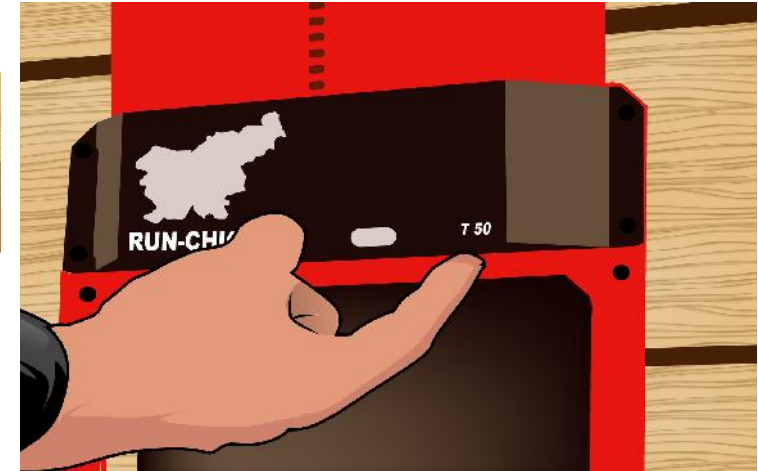

**9** Press the test switch to see if the device is up and running.



**10** **!WARNINGS!**

GAIN EASY ACCESS TO YOUR WARRANTY  
AT [WWW.RUN-CHICKEN.COM](http://WWW.RUN-CHICKEN.COM).

AFTER REGISTRATION YOU WILL  
GET A CONFIRMATION EMAIL THAT  
THE WARRANTY IS APPLIED.


**REGISTRATION CODE:**

**11** WARRANTY & PRODUCT  
REGISTRATION



**12** **INSTALLATION FINISHED**  
Plug and play - no need for any  
additional step. Door will open upon  
day light and close at night.




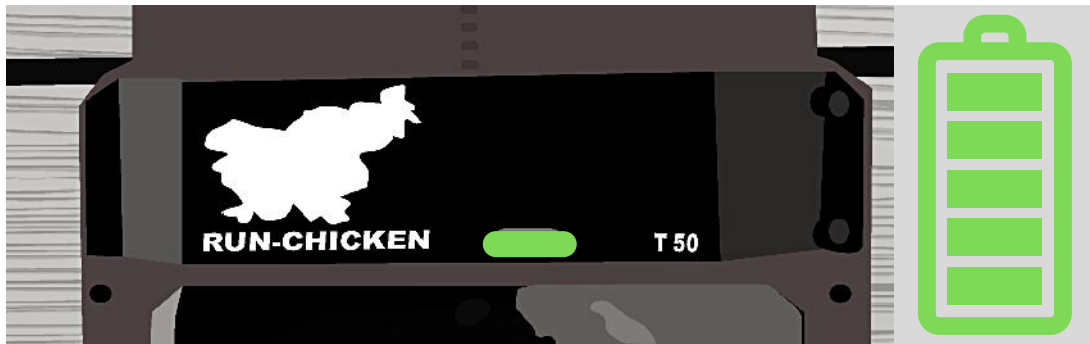

**GREEN LIGHT** - Blinking means that the battery is full and that the unit is active// UP AND RUNNING.

#### **BATTERY LIFETIME:**

Type of battery: AA / Recommended brands Duracell or Sony. If you use high quality batteries, they should last you a whole year even in cold climates.

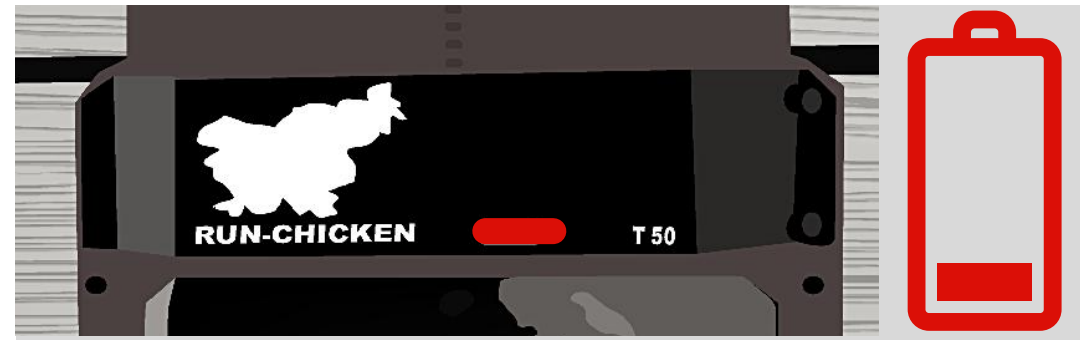

**RED LIGHT**- Blinking means that the battery is empty or almost empty. In this case you need to replace the battery. approx. 20 days prior fully empty batteries.

#### **COMPLETELY EMPTY BATTERIES?**

When battery is completely empty the door will not open on sunrise and will stay closed so to secure your chicken coop.



#### **FACTORY RESET - PRESSED FOR 20 SEC**

When pressed for more than 20 sec, the unit will go to factory default. The same happens when the batteries are changed.

**DEFAULT FACTORY MODE.** The door always works on factory default mode if they are not configured differently by the user with the Online Configurator. Every time that you press the test button the door goes to **TEST MODE** for 20 min. This makes them more reactive to light and they will go up and down if Light/Dark occurs. It also reverses the action of the door- if they are opening, they will start to close and vice versa. If the button is pressed while the door is moving, they will stop. This mode must be on when you're using the online configurator. After 20 min of non-pressing the test button the door will go back in **SAFE MODE**. The door operating in default safe mode will open when the light is shining for more than 20 min and will close if it will be dark for more than 20 min (the sensor excludes all artificial light sources for example: street lights, flashlights or sensor lights). **Factory default mode works fantastically for all users.**

# ADVANCED ONLINE CONFIGURATOR



ADVANCED ONLINE CONFIGURATION is available for all users who would like to program their Run-Chicken coop door to open and close at certain times no matter the light and space conditions.



[www.run-chicken.com](http://www.run-chicken.com)

VIDEO MANUAL AND ADVANCED ONLINE CONFIGURATOR ARE AVAILABLE AT [WWW.RUN-CHICKEN.COM/CONFIGURATOR](http://WWW.RUN-CHICKEN.COM/CONFIGURATOR)

## User Manual

***THANK YOU...***

***With your help we can make new products with the same kind of QUALITY and ENERGY.***

***Leave YOUR feedback if you support our passion.***



**[info@run-chicken.com](mailto:info@run-chicken.com)**